



540 S. St. Clair St. Toledo OH 43604
419-720-8800
Greatlakesparty.com

Cotton Candy Machine Instructions

Step 1

Before plugging the machine in, make sure all buttons are in the off position and all travel locks are unlocked. (Unscrew and push down two knobs on either side of the head, or turn the black levers on the side of the machine to an up and down position)

Step 2

Pour cotton candy approved sugar into the center head of the machine to about 90% full.

Step 3a

For "The Breeze" machine, turn the motor and master switch on, wait 10 seconds, then turn the heat switch on. Adjust the heat to 75% heat.

Step 3b

For the "Spin Magic" machine, turn the motor and heat button to ON, and adjust the dial until the needle is in the green.

Step 4

The machine should start making floss in less than a minute. Turn the heat down if you see the sugar smoking. Turn the motor switch off in order to add more sugar.

Step 5

When finished making floss for the day or a prolonged period, run out the remainder of the sugar, then turn the heat switch off but allow the head to spin for another 5 minutes to cool down and then turn the motor switch off as well.

Step 6

To start making floss again repeat steps 1 through 5. If done operating the machine, please refer to the cleaning instructions found below.

Cleaning

With warm or hot water, rinse and wipe the bowl and net clean of all sugar.

Using a warm or hot washcloth, wipe down the outside of the machine base clean of sugar

Do not remove the small rubber tabs from "The Breeze" machine.

Do not wipe down or get the spinning head wet.

Do not submerge the cotton candy machine in water.

Parts

Be sure to return all the supplied parts such as the Cotton Candy machine, rubber tabs, bowl, netting, and net clips.