



540 S. St. Clair St. Toledo OH 43604
419-720-8800
Greatlakesparty.com

Pretzel Warmer Instructions

Step 1

Place the machine on a secure level table top and plug the unit into a 120 Volt, 15 Amp outlet.

Step 2

Flip the switch to the "ON" position, this will activate the lights, heat and rotisserie. Once finished with the machine flip switch to the "OFF" position and unplug the unit. Follow cleaning instructions below.

Cleaning

After you're finished using the machine remove all debris, turn off switch and unplug machine. Wipe down the inside of the machine with a damp cloth.

Parts

Be sure to return all the supplied parts:
Pretzel Warmer Unit
Pretzel Racks

Tips

Caution: Parts of the machine will be hot.
Do not immerse unit in water.