



540 S. St. Clair St. Toledo OH 43604  
419-720-8800  
Greatlakesparty.com

---

## **Wireless Portable Speaker Instructions**

### **Step 1**

Speaker should come fully charged and ready for use.

### **Step 2**

Set up speaker on Tripod if desired.

### **Step 3**

Connect desired audio device.i.e microphone/ music source.Bluetooth or Aux corded.

### **Step 4**

If using bluetooth.Press the bluetooth button.The indicator light will start flashing.It is looking for a device to pair with.Select Galaxy audio from the bluetooth menu on your desired device.You're now able to transmit from your phone.

### **Step 5**

If using a microphone turn on the UHF-ACS dial.Hold down arrow until display flashes.Select channel.Press and hold the power button on the microphone.The power button is at the end of the mic.Select matching channel

### **Step 6**

Use volume controls to find an optimal audio level.

### **Step 7**

After finished using the speaker.Unplug all items and gently place back in the case.

---

## **Cleaning**

Make sure unit and accessories stay clean and dry.

All accessories must be returned in the case

---

## **Parts**

Speaker

Speaker Tripod

Microphone

Power cord for Speaker

---

## **Tips**

This Speaker is not a large enough unit to DJ a wedding or another large scale event.It is a better idea for small events or background music.

Best used indoors.